


Lista cz ci

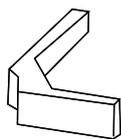

AX4



BX16



CX16




DX16



EX1



FX4

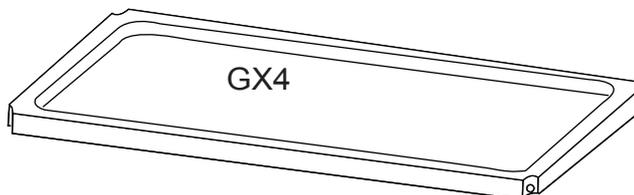

GX4




HX2



IX2




JX4

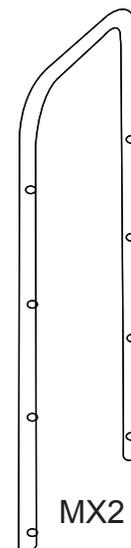


MX2


1

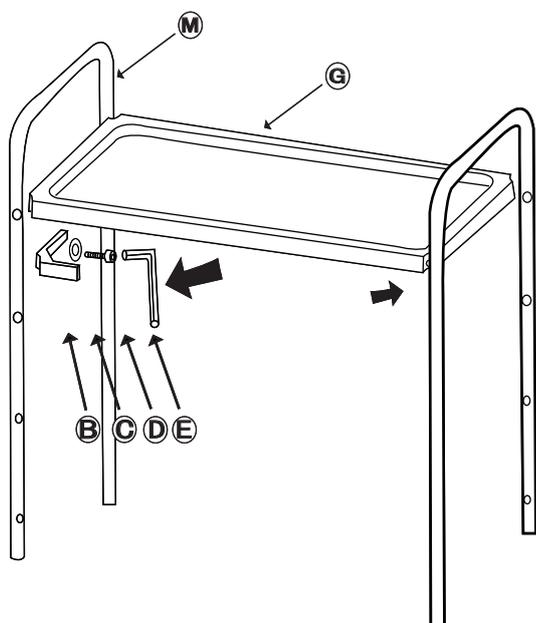

2

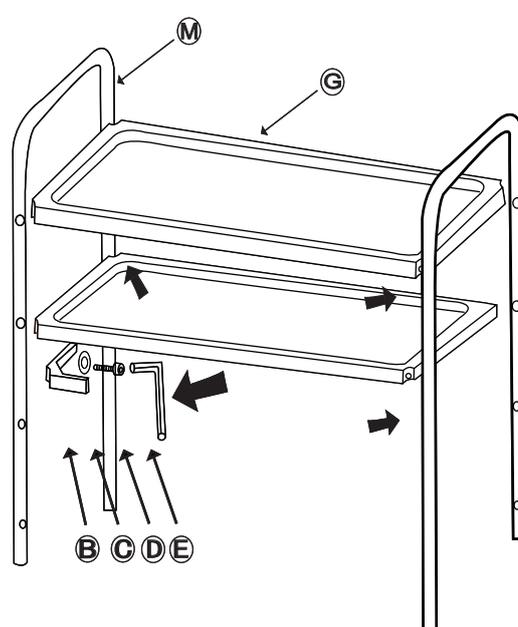

3

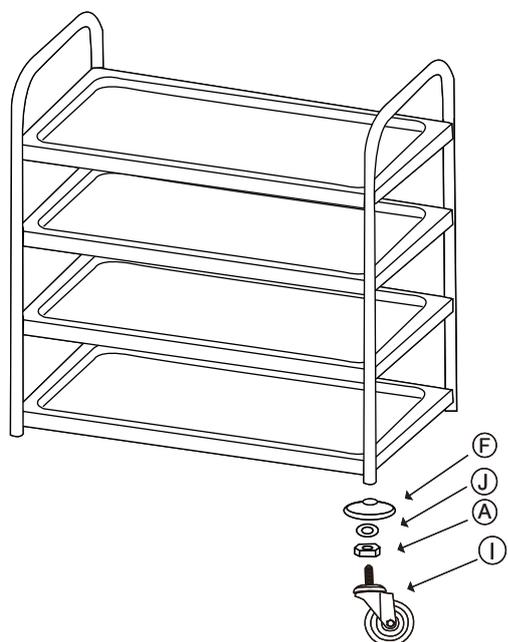

4

