




Lista części

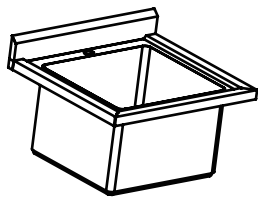

AX1

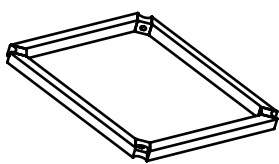

 BX1



CX4



DX12



EX4



FX16




HX16




IX1

1

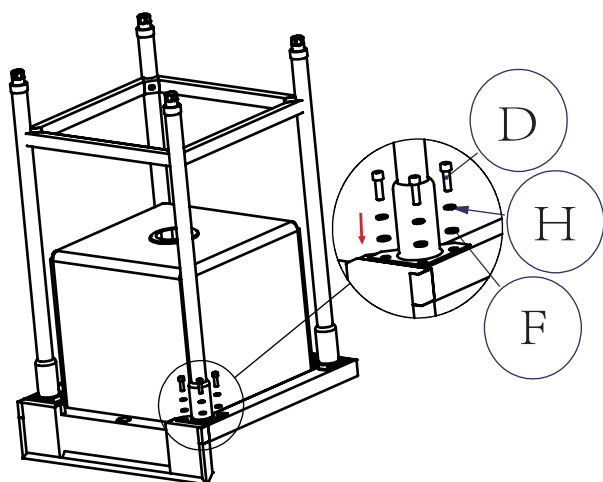

2

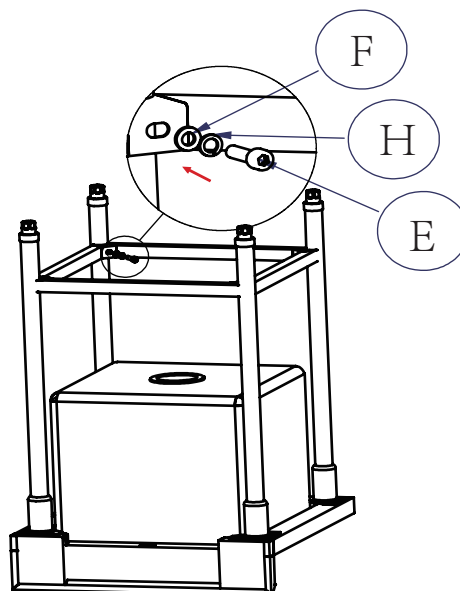

3

